

***APF* electronics, Inc.**  
**casino I**  
**operating instructions**

**"Cartridge # MG1009"**

## GETTING STARTED

Insert the cartridge into the main unit and press the reset button.

Game # 1 — Roulette

Game # 2 — Keno

Game # 3 — Slots

### Number of Players

2 players can play against the house. Player 1 always uses the left controller. If there is a second player, he uses the right controller.

### Roulette

1. The play field is shown on the screen with each player starting with \$200.00.
2. To place your bets, move the joystick to the left or right. The position of the cursor determines where you are placing your bet. On the main board bets of 1 to 9 dollars are accepted. On the outside bets of 1 to 99 dollars are accepted. To enter your bet, select the amount you want to bet and press the enter key. Then move on to the next number you want.

3. **To End Betting** – When you are finished betting, move your joystick in the down position. When both players have done this, the wheel will then spin. (Note: If there is only one player, he must pull both joysticks down to start the wheel.)
4. **Scoring** – The computer will mark the winning numbers and add or subtract accordingly to your bank account.
5. **To clear the board for the next spin**, push your controller in the up position. Now you are ready to try your luck again.

## **Keno**

### **Objective**

The computer will pick 20 numbers out of 80. You pick from 2 to 15 numbers. The number of picks determines the odds and payoff.

1. The board is shown on the screen with each player having a \$100.00 bank. Every time you play a \$.70 wager is placed.

2. To Select Numbers — Press the numbers you want and then the enter key. The computer then accepts your entry. To finish selecting, pull the joystick in the down position. When both players have done this, the board will clear from the screen and the computer will select the winning numbers.
3. To Continue Playing — Press the clear key and a new playfield will appear.

### Slots — 1 or 2 players

To operate the slot machine pull your joystick in the Down position. Your losses and winnings are automatically accounted by the computer.